




# CLEARSTREAM 2™ WITH MOUNT

Before attaching the antenna to any surface, TEST RECEPTION in that area.


Connect the antenna to the TV or receiver and run a full channel scan. If reception is not as desired move the antenna and rescan TV/receiver.

Before beginning assembly, make sure all pieces needed are present.

- |          |   |          |   |                       |
|----------|---|----------|---|-----------------------|
| <b>1</b> |  | <b>3</b> |  | 1. Plastic Base Cover |
| <b>2</b> |  |          |   | 2. Circular Base      |
|          |   |          |   | 3. Hex Bolts          |

## Free-Standing Indoor Use

Tools Required: Adjustable Wrench

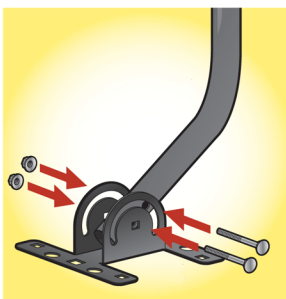

### 1 Replace Bolts:


Place mast (4) into middle of mast base (5) then adjust mast to vertical position and secure with 2 hex bolts.

2

Slip plastic base cover (6) over mast, nesting metal base into plastic base cover. Place mast/plastic base cover assembly on circular base (7) and snap together.



3

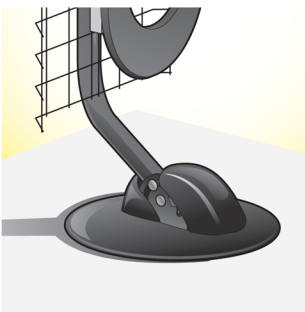

Install antenna on mast (4) by slipping clamp on back of reflector (1) over mast pipe and tighten wing nuts.

Point antenna in direction of your TV stations' transmission towers, (to locate your towers, go to [antennapoint.com](http://antennapoint.com) or contact your local tv stations). Connect the opposite end of coaxial cable to your TV or receiver. Perform channel scan and check reception.