



You must be certain that the coax from the power inserter is connected to the port that is labeled "DC Pass Out."

Option 2: 120 VAC power is not available@splitter location.

Using A Preamplifier With A Splitter : Option 2